

N BARK Training Collar

1

Remove any collars and tags before fitting the **Furwear No Bark Training Collar** to your dog. Make sure you can pass two fingers between the collar and their neck at all points. Adjust as necessary.

Once the collar is attached, wait for at least 10 minutes before activating to prevent your dog from getting "Collar Smart".

2


Press the ON button. Then use the switch to select either sound or vibration, depending on the method that you would like to use to train your dog.

3

Your **Furwear No Bark Training Collar** has two levels of sensitivity that can be adjusted by using the sensitivity switch, L and H. Use the L switch for a lower sensitivity and the H switch for a greater sensitivity or for higher pitched barks. The sound of your dog barking will now activate the collar.

We recommend starting your training on the lowest level and increasing only if your dog does not respond.

When not in use, press the OFF button to save battery life.

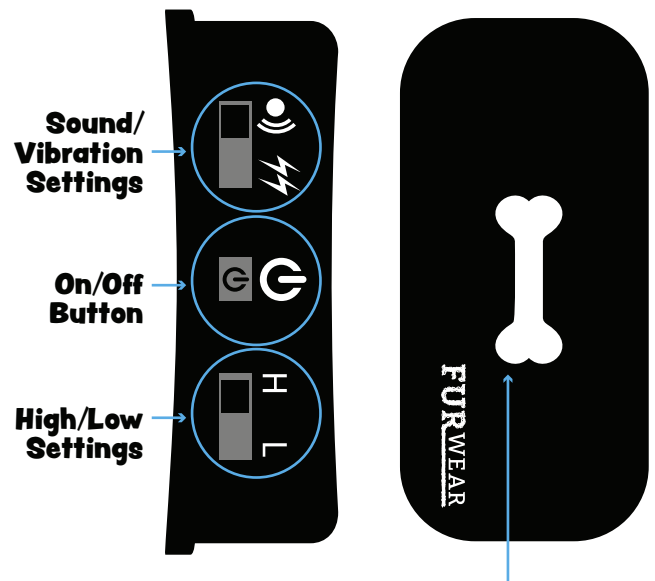

The bone shaped LED light will shine green when it is turned ON and red when it is turned OFF. LED light will flash red when the battery is at 10% or less.

Only use your **Furwear No Bark Training Collar** for a maximum of 8-9 hours per day before turning off. Make sure to leave the collar on for a further 10 minutes before removing to avoid your dog from getting 'Collar Smart.'

Training your dog does not have to be a stressful or overwhelming job. We recommend working with your pet to find the best training method for you both. To successfully train your pet, we recommend using the collar in combination with other training methods, and to monitor and encourage good behavior through praise and treats when your dog has positively reacted to the collar and ceased barking. By praising and rewarding positive behavior, you will see results much sooner and speed up the training process.